

QUICK INSTRUCTIONS MODEL # 2655

RECORDING ALBUMS, CASSETTES, RADIO AND AUX-IN TO CD & PC.

RECORDING ONTO CD/ERASING:

TO RECORD FROM TURNTABLE TO CD:

- 1.-Turn the unit ON by pressing the power button.
- 2.-Press **CD button** to select CD function.
- 3.-Press **OPEN/CLOSE button** to open CD door.
- 4.-Put a CD-R or CD-RW blank disc on the CD door with the label facing up.
- 5.-Press **OPEN/CLOSE button** to close the CD door. Wait until the word "BUSY" disappears.
- 6.-Press **PHONE button** to select **phono (phonograph) function**.
- 7.-Release **TONARM** and remove the white needle cover. Put a record onto the turntable.
- 8.-Press **AUTO MANUAL** button to activate the auto track division. "Auto Track" will appear on display.
- 9.-Press **RECORD** button to activate recording. "Rec II" will appear on display.
- 10.-Move **TONARM** over to the record to start playing.
- 11.-Press **PLAY** button to start recording. (**IMPORTANT:** You must press the small **PLAY** button (">II") on front of unit between ">>I" (**Skip**) and "■" (**Stop**). Do not press the large **PLAY** button (">II") on the top which is for the turntable only.)
- 12.-Adjust the **REC-LEVEL** and the **VOLUME**.

TO ADJUST THE RECORD LEVEL: (Rec-Level must be Adjusted for "Auto Manual")

Press **Rec-level -** or **Rec-level +** buttons.

During the adjustment of the rec-level buttons, please check "Auto Track" (bottom center of Display). There are bar code lines. Make sure those lines move back & forth. Do not let them reach "Over". Select either more or less for record level depending on the sound of music from the source. If you don't select "Auto Manual" you do not need to adjust the Record Level.

If you select "Auto Manual", do the Rec-Level adjustments in all functions. (Tape, Phono & Aux)

PLEASE NOTE: IF YOU DON'T WANT THE AUTO FUNCTION, PRESS AUTO MANUAL BUTTON UNTIL AUTO TRACK DISAPPEARS ON THE DISPLAY.

TO DIVIDE TRACKS MANUALLY, PRESS "TRACK INCREMENT" BUTTON.

WHILE RECORDING, TO CHANGE OR TURN OVER THE RECORD, PRESS **PLAY/PAUSE** BUTTON. TO PAUSE THE RECORDING, PRESS **PLAY/PAUSE** BUTTON AGAIN TO CONTINUE RECORDING. TO STOP THE RECORDING, PRESS **STOP** BUTTON.

TO RECORD FROM CASSETTE TO A CD:

Follow **TURNTABLE STEPS** 1-5, then continue the following steps:

- 6.-Press **TAPE** button to select tape function.
- 7.-Press **AUTO MANUAL** button to activate the auto track division. (Auto Track appears on display.)
- 8.-Press **RECORD** button to activate recording. ("Rec" will appear on display.)
- 9.-Load a **CASSETTE TAPE** into the cassette deck on right side of unit. Insert fully to begin playing.
- 10.-Press **PLAY** button to start recording. (**IMPORTANT:** You must press the small **PLAY** button (">II") on front of unit between ">>I" (**Skip**) and "■" (**Stop**). Do not press the large **PLAY** button (">II") on the top which is for the turntable only.)
- 11.-Adjust the **REC-LEVEL** and the **VOLUME**.

NOTE: WHEN ONE SIDE OF CASSETTE IS FINISHED, PRESS STOP BUTTON TO STOP THE RECORDING, TURN OVER OR CHANGE THE CASSETTE AND FOLLOW ABOVE CASSETTE STEPS 8, 9, & 10.

TO RECORD FROM AUX-IN TO CD:

Follow **TURNTABLE STEPS** 1- 5, then continue the following steps:

- 6.- Connect the **AUX-IN CORD** to the **AUX-IN JACKS** on the rear of unit, matching the colors with Aux-in cord. Connect the other end to **EARPHONE JACK** or **LINE-OUT JACK** of Auxiliary Device. Turn it on and adjust the volume level.
- 7.-Press **AUX** button to select aux function.
- 8.-Press **AUTO MANUAL** button to activate the auto track division. (Auto Track appears on display.)

- 9.- Press **RECORD** button to activate recording. ("Rec" will appear on display.)
- 10.- Press **PLAY** button on the Auxiliary Device to start playing.
- 11.- Press **PLAY** button on the unit to start recording. (**IMPORTANT:** You must press the small **PLAY** button ("**>II**") on front of unit between "**>>I**" (**Skip**) and "**■**" (**Stop**). Do **not** press the large **PLAY** button ("**>II**") on the top which is for the turntable only.)
- 12.- Adjust the **REC-LEVEL** and the **VOLUME** on the unit.

NOTE: ANY DEVICE THAT YOU CONNECT THROUGH AUX-IN WILL GET THE NECESSARY SIGNAL AND CAN BE RECORDED ONTO CD.

TO CHECK HOW MANY MINUTES ARE LEFT ON THE CDR OR CDR-W DISC, PRESS DISPLAY BUTTON ON THE REMOTE CONTROL.

TO ERASE:

PLEASE NOTE: ONLY CD-RW (FINALIZED OR UN-FINALIZED) DISCS CAN BE ERASED.

(MUST BE IN CD MODE):

PRESS STOP BUTTON TO STOP THE RECORDING AND PRESS CD BUTTON TO SELECT CD FUNCTION.

- 1.- Short press **ERASE** button to erase the last track and do step 3.
- 2.- Long press **ERASE** button until display shows ERA-ALL to erase all tracks.
- 3.- Press **PLAY** button to start erasing. (**IMPORTANT:** You must press the small **PLAY** button ("**>II**") on front of unit between "**>>I**" (**Skip**) and "**■**" (**Stop**). Do **not** press the large **PLAY** button ("**>II**") on the top which is for the turntable only.)
- 4.- Wait until "BUSY" disappears.

TO FINALIZE A CD:

NOTE: In order for a disc to become a standard CD and able to be played on other CD players, the CD must be finalized.

(MUST BE IN CD MODE):

PRESS STOP BUTTON TO STOP THE RECORDING, THEN PRESS CD BUTTON TO SELECT CD FUNCTION.

- 1.- Press **FINALIZE** button and "Finalize" will show on the Display.

- 2.- Press **PLAY** button to start finalizing. (**IMPORTANT:** You must press the small **PLAY** button ("**>II**") on front of unit between "**>>I**" (**Skip**) and "**■**" (**Stop**). Do **not** press the large **PLAY** button ("**>II**") on the top which is for the turntable only.) Wait until "BUSY" disappears to complete finalizing. The CD door will open. To check that the CD has been finalized, put the disc back in the CD door. Close the door. Display will show CD-R or CD-RW on the left top corner instead of "**NOTOC CD-R/RW**".

RECORDING, EXPORTING & SAVING INTO COMPUTER

THE AUDACITY SOFTWARE IS COMPATIBLE WITH WINDOWS 98, 2000, ME, XP, VISTA, 7 AND MAC OS 9, MAC OS X SYSTEMS.

- 1.- Connect TURNTABLE'S power cord to an AC outlet .
(standard is 120V~60HZ)
- 2.- Connect TURNTABLE to the Computer with USB cord.
- 3.- Press **POWER** button to turn the unit on.
- 4.- Please insert AUDACITY software disc. **NOTE: If the Audacity Setup Wizard doesn't open automatically, do the following:**
- 5.- Go to "MY COMPUTER" and double click on CD ROM or AUDACITY "D" Drive. It will open the software. To set it up follow the directions on the screen until you finish the installation. AUDACITY will open or you can open the Audacity software and start recording your files.

NOTE: ONCE YOU SETUP THE AUDACITY SOFTWARE, YOU DO NOT NEED TO RE-SET IT WITH EACH USE.

- 6.- Click "EDIT" on AUDACITY Interface and select "PREFERENCES".
- 7.- Click on Playback/Device's arrow to select MICROSOFT SOUND MAPPER OUT PUT.
- 8.- Click on "AUDIO I/O" then click on Recording/Device's arrow to select "MICROPHONE USB AUDIO CONTROLLER" or "USB AUDIO DEVICE".
- 9.- Click channel's arrow and select 2 stereo, then click "OK".

NOTE: If you cannot get the "MICROPHONE USB AUDIO CONTROLLER" or "USB AUDIO DEVICE" from the Device list, close the Audacity Software. Make sure everything is connected and re-open. Then try again or un-install the software and re-install it again.

FOR WINDOWS 7 VERSION, PLEASE REFER TO THE INSTRUCTION MANUAL "ADJUSTMENT FOR WINDOWS 7 AND SOME VISTA SYSTEMS ONLY" FOR ADDITIONAL SETTING.

RECORDING FROM TURNTABLE:

- 1.- Select PHONO function.
- 2.- Release tonearm and remove the white needle cover.
- 3.- Put a Record on the TURNTABLE.
(Remember to use 45 adapter for 45 RPM Records.)
- 4.- Adjust the OUTPUT and INPUT volume on the Audacity Interface.
- 5.- Move tonearm over to the beginning of Record to start playing.
- 6.- Click the RECORD button on the computer to start Recording.

NOTE: The WAVES (Top and bottom) will show on the Interface in each Recording. If you do not get the WAVES, click "START" then select "PROGRAMS", then "ACCESORIES", then "ENTERTAINMENT", then "SOUND RECORDER". Click "EDIT" and go down and select "AUDIO PROPERTIES".

Click on SOUND RECORDER/DEFAULT DEVICE arrow and select "MICROPHONE USB AUDIO CONTROLLER" or "USB AUDIO DEVICE", then click on VOLUME to adjust the Wave's Volume.
Do same steps with the other Functions.

- 7.- At the end of the Record, click "PAUSE" button on computer and press eject button on the turntable.

NOTE: YOU CAN RAISE THE CUE-LEVER TO PAUSE OR STOP WHEN THE SONG FINISHES, OR WHEN YOU TURN OVER THE RECORD OR CHANGE THE RECORD, THEN LOWER THE CUE-LEVER TO CONTINUE PLAYING THE SONG.

- 8.- Turn over the album, replace album, or move tonearm to another desired song to start playing the next song. Immediately click "PAUSE" button on computer and downloading will continue.

MOVE THE TONEARM OVER TO THE DESIRED POSITION OF THE RECORD AND LOWER THE CUE-LEVER TO START PLAYING, THEN CLICK RECORD BUTTON ON THE AUDACITY PANEL TO RECORD THE NEXT SONG.

- 9.- Repeat steps 5, 6, 7 & 8 until you have finished downloading.

PLEASE NOTE: Do not click "STOP" button on computer while continuously downloading songs. Remember to click "PAUSE" button in between your desired songs. Press "STOP" button on computer only when all your desired songs have been downloaded.

PLAYING:

AFTER YOU HAVE FINISHED DOWNLOADING YOU MAY PLAY BACK THE RECODED SONGS THROUGH YOUR COMPUTER. IN STOP MODE, SIMPLY CLICK THE SKIP BUTTON TO SKIP TO START, THEN CLICK THE PLAY BUTTON TO START PLAYING THE 1ST SONG.
CLICK STOP BUTTON TO STOP PLAYING THE MUSIC.

RECORDING FROM CASSETTE:

- 1.-Press POWER button to turn the unit on.
- 2.-Press the TAPE button to select tape function.
- 3.-Load a CASSETTE TAPE into the cassette deck on right side of unit. Tape will begin to play immediately when fully inserted.
- 4.-Click the RECORD button on computer to start Recording.
- 5.-At the end of first side of Cassette, click "PAUSE" button on computer and press eject button on the unit to eject the cassette.
- 6.-Turn over or Replace the Cassette and load it to play. Immediately click "PAUSE" button on computer and downloading will continue.
- 7.-Repeat steps 3, 4, 5 & 6 until you have finished downloading.

PLEASE NOTE: Do not click "STOP" button on computer while continuously downloading songs. Remember to click "PAUSE" button in between your desired songs. Press "STOP" button on computer only when all your desired songs have been downloaded.

RECORDING FROM AUX-IN:

- 1.-Press POWER button to turn the unit on.
- 2.-Press AUX button to select AUX function.
- 3.- Connect the AUX-IN CORD to the AUX-IN JACKS on the rear of unit, matching the colors and with the Aux -in cord. Connect the other end to EARPHONE JACK or LINE-OUT JACK of auxiliary device. Turn it on and adjust the volume level.
- 4.-Press PLAY button to start playing.
- 5.-Click RECORD button on computer to start recording.

- 6.-To skip to another song, click "PAUSE" button on computer and press stop button on the auxiliary device. Press skip button to select another desired song.
- 7.-Press PLAY button on the auxiliary device to start playing the next song. Immediately click "PAUSE" button on computer and downloading will continue.
- 8.-Repeat steps 4, 5, 6 & 7 until you have finished downloading.

PLEASE NOTE: Do not click "STOP" button on computer while continuously downloading songs. Remember to click "PAUSE" button in between your desired songs. Press "STOP" button on computer only when all your desired songs have been downloaded.

PREPARING TO EXPORT AND SAVE FOR MP3 FORMAT:

PREPARE FOR MP3 FORMAT(**Additional Software "LAME.ENC.DLL" needs to be installed**).

- 1.-Please make sure AUDACITY DISC is still inserted in your computer.
- 2.-Click on "EDIT" and select "PREFERENCES".
- 3.- Click "LIBRARIES" on the left then click on "Locate...". Click on LOOK IN: Arrow to select "CD ROM" or "AUDACITY D" double click on Audacity _For_ WIN. Highlight "LAME.ENC.DLL" and click on "OPEN" then click "OK".

NOW MP3 SOFTWARE IS COMPLETE AND YOU MAY PROCEED WITH THE SAVING AND EXPORTING TO MP3 FORMAT.

EXPORT & SAVE MUSIC TO MP3, OGG OR WAV FORMATS:

(THESE ARE DIGITAL FILE FORMATS FOR AUDIO (MUSIC) AND MOST OF THE CURRENT COMPUTERS ARE COMPATIBLE. HOWEVER IF YOU COPY THE FILE ONTO A CD DISC (CD-R OR CD-RW) AND PLAY WITH ANOTHER CD PLAYER, YOU MUST MAKE SURE THE CD PLAYER SUPPORTS THOSE FORMATS; OTHERWISE THE COPIED CD DISC WILL NOT PLAY. THE SAME THING APPLIES FOR THE COPIED FILE TO PLAY WITH OTHER MP3 PLAYERS.)

- 1.-Click the " << SKIP TO START" button to skip to start at the beginning of the first recorded song.
- 2.-Move cursor over to the graphic area (waves) at the beginning of the song. Left click mouse, hold, then drag from the left to the right (the time bar color changes to grey -highlighted). Release the mouse when the highlighted time bar reaches the end of song.
- 3.-Click "FILE" and select "EXPORT AS MP3" or "OGG and "WAV".
(MP3 FORMAT IS MORE COMMON.)

- 4.-Click on "SAVE IN'S" arrow to select where you want to save the song on the computer. **(MOST PEOPLE SAVE MUSIC IN "MY DOCUMENTS/MUSIC" FOLDER.)**
- 5.-Put song's title in "FILE NAME".
- 6.-Click "SAVE".
- 7.-Complete the box of "Edit Metadata".

NOTE: THIS BOX WILL COME UP ONLY WITH THE 1ST EXPORT RECORDED SONG OR EVERYTIME THAT AUDACITY IS OPENED.

- 8.-CLICK "OK" and wait for Export Remaining Time reach: 0.00:00.
(NOW YOUR SONG IS EXPORTED & SAVED.)
- 9.-Repeat steps 2, 3, 4, 5, 6, 7 & 8 until you export & save all the songs.
Now you can copy the Exported & saved music to an MP3 Player or iPod. Refer to the Instruction Book of USB Turntable Model # 2655.

TO BURN CDS: You must have a CD burner in your computer. Refer to the instructions related to the burner's use.

Dear Customer,
If you have any trouble after you follow these Quick Instructions, please call our Customer Service Dept. at (1- 800) 982-3954 EXT.117.

**THANK YOU
CUSTOMER SERVICE**

QUICK START GUIDE

Model 2655

Connect the power cord and connect the LINE OUT cable into the LINE IN from another device with speakers (home stereo system, TV, etc.) Press the POWER button to switch the unit on.

Turntable

Assemble and adjust the balance weight. Please refer to the OPERATION MANUAL on page 15.

Press the PHONO button and select the speed to play.

Place a record onto the turntable. Release the tone arm and remove the white needle cover.

Move the tone arm over to the record to start playing.

Play a CD

Press the CD button, press the "open/close" button then place the CD in the tray with label facing up. Close the tray.

Press the PLAY button to start playing.

To record onto a CD from Phonograph, Cassette or AUX-IN, please refer to the OPERATION MANUAL on page 21.

Play a cassette

Press the TAPE button to select tape function.

Insert a tape into the cassette door on the side of the unit to play.

Press CASSETTE button half way in to FAST FORWARD.

Press CASSETTE button all the way in to STOP and EJECT the tape.

AUX-IN function

Connect the external source such as MP3 player to AUX-IN jack with the aux cable. Turn on your MP3 player and adjust the volume to middle or high level.

Press the AUX button to select AUX IN function.

Press PLAY button on MP3 to start playing.

PC recording

Connect the unit to the PC with USB cable.

Install the Audacity software and follow the directions on the screen.

To record from PHONO, CASSETTE or AUX to PC, refer to the instruction manual on page 25.

You can also play the unit using the remote control. Please refer to the OPERATION MANUAL on page 8.

Press the POWER button to switch off the unit. If unit will not be used for a long period of time (such as while on vacation), unplug the power cord from the AC wall outlet.

NOTE: For transportation, refit the balance weight packing foam to prevent damage.

TURNTABLE OPERATION STEPS

The tone arm will automatically return to the arm rest after reaching the end of the record.

Rotate the 33RPM reset screw clockwise or counterclockwise to adjust the reset time if the record does not automatically return to the arm rest. The small silver screw is to adjust the larger reset screw. Please rotate the silver screw to make the reset screw able to be turned. The same applies to the silver and reset screws for 45RPM.

OPERATION STEPS

1. Plug the unit into the household outlet.

2. Screw the balance weight which comes along with the product (packed with this Instruction Manual) on the tone arm through the center. Please refer to instructions below.

3. The balance weight is to adjust the pressure of the needle. If the pressure is too much, the sound will become distorted; if the pressure is too little, track skipping will easily happen. Please turn the balance weight clockwise or counterclockwise per instructions below.

4. Put the skidproof mat on the turntable.

5. Press the Power button.

6. Remove the tone arm-rest holder.


7. Select the speed.

8. Put a record on the turntable.

9. Remove white protective needle cover by gently pulling downward. Keep this needle cover in a safe place so you can use it to protect the needle when unit is not in use.

10. Move the tone arm gently to the desired position over the record.

11. Lower the lift handle slowly.

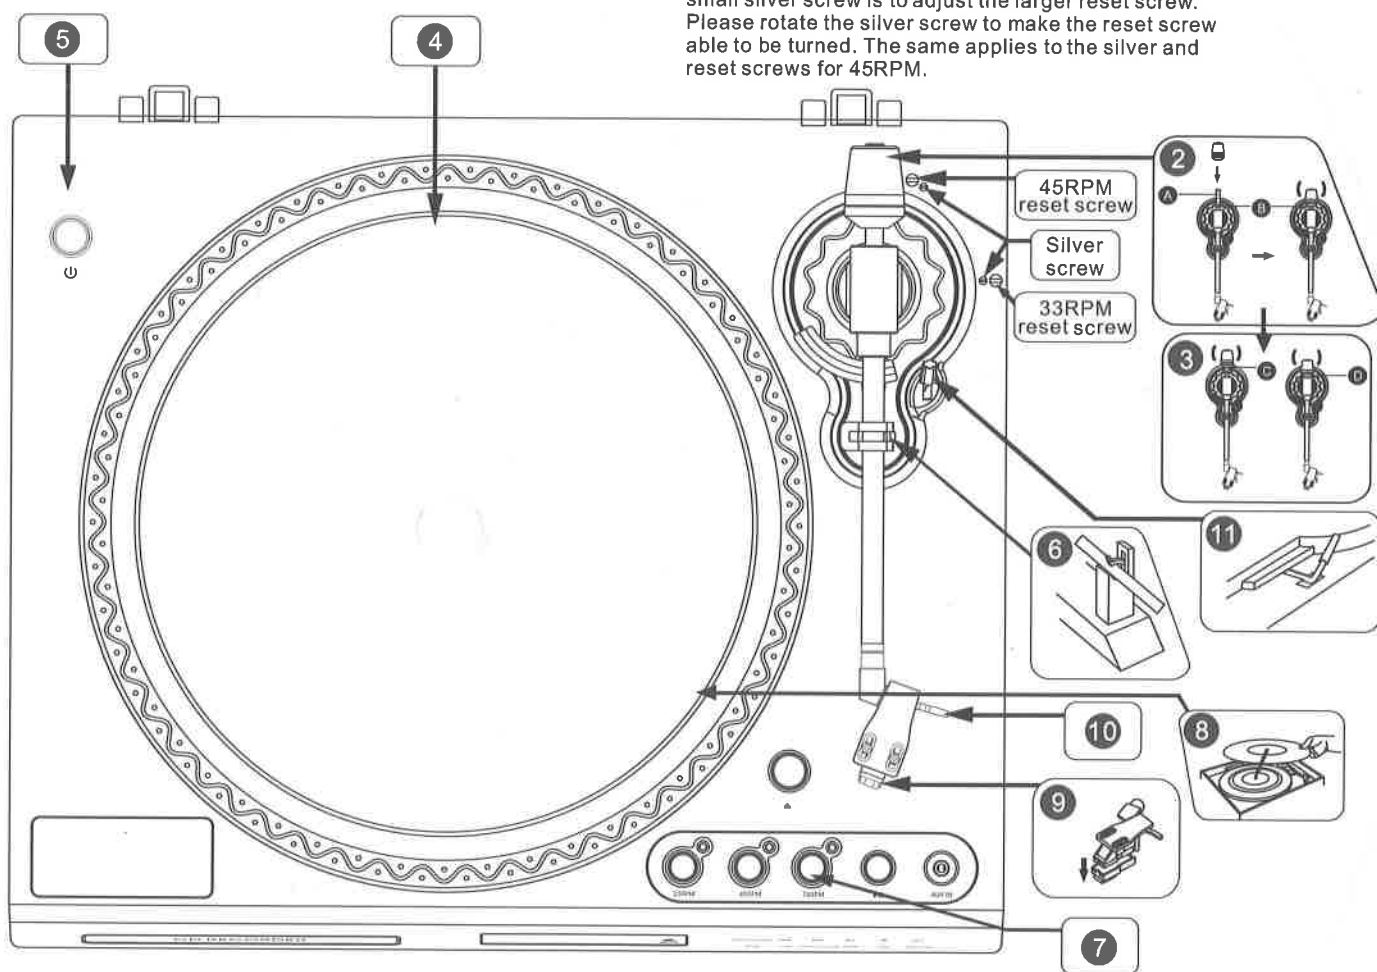

- Put the balance weight into scale mark **A** of the tone arm, then rotate it to the middle position of the scale mark **B**.
- Rotate the balance weight counterclockwise so that it moves outward towards position **C** if track skipping occurs.
- Rotate the balance weight clockwise so that it moves inward towards position **D** if the sound is distorted or the bass poor.
- Fine tune the balance weight position between **C** and **D** to achieve optimum sound performance.
- **NOTE:** Do not try to adjust balance weight while playing a record. This could break the needle or scratch record.